



AH68-02109K

MAX-DA69

DVD MINI COMPONENT SYSTEM WITH USB HOST

DVD/CD/MP3-CD/CD-R/RW PLAYBACK
user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/global/register





Safety Warnings

CAUTION
 RISK OF ELECTRIC SHOCK.
 DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER (or BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION


- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

[Saudi Arabian Standards Organisation only]



THIS APPLIANCE IS FITTED WITH 220V SASO APPROVED PLUG.THE CUSTOMER IS ENTITLED TO A FREE SASO APPROVED 127V PLUG FROM THE LOCAL DEALER.




Precautions

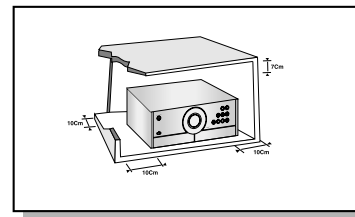


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc insert hole is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

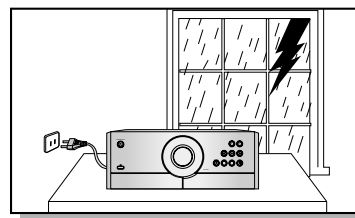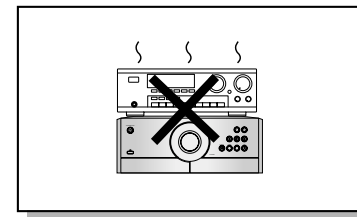


During thunderstorms, disconnect AC main plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

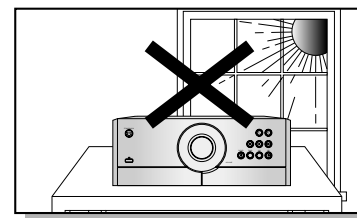

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

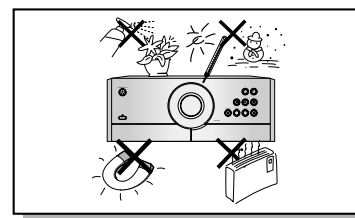

Protect the player from moisture(i.e. vases) , and excess heat(e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only. Condensation may occur if your player or disc have been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

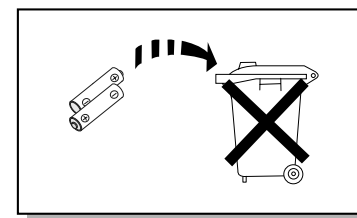

The battery used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.



Notes on Discs



DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.
(Your DVD player will only play DVDs that are labelled with identical region codes.)

Playable Discs



Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
DVD-VIDEO		Audio + Video	12cm	Approx. 240 min. (single-sided) Approx. 480 min. (double-sided)
			8cm	Approx. 80 min. (single-sided) Approx. 160 min. (double-sided)
AUDIO-CD		Audio	12cm	74 min.
			8cm	20 min.
DivX		Audio + Video	12cm	74 min.
			8cm	20 min.

Do not use the following types of disc!



- LD, CD-G, CD-I, CD-ROM and DVD-ROM discs cannot be played on this player.
If such discs are played, a <WRONG DISC FORMAT> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player.
If such discs are played, a <CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE> message appears on the TV screen.

Copy Protection

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Recording Format

This product does not support Secure (DRM) Media files.

CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
Do not use CD-R discs over 700MB/80 minute as they may not be playback.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the "mp3" and extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

CD-R JPEG Discs

- Only files with the ".jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.


DVD±R/RW, CD-R/RW DivX Discs

- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not play.
- Software updates for incompatible formats are not supported.
(Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., please visit "www.divxnetworks.net".




Description

—Front Panel—

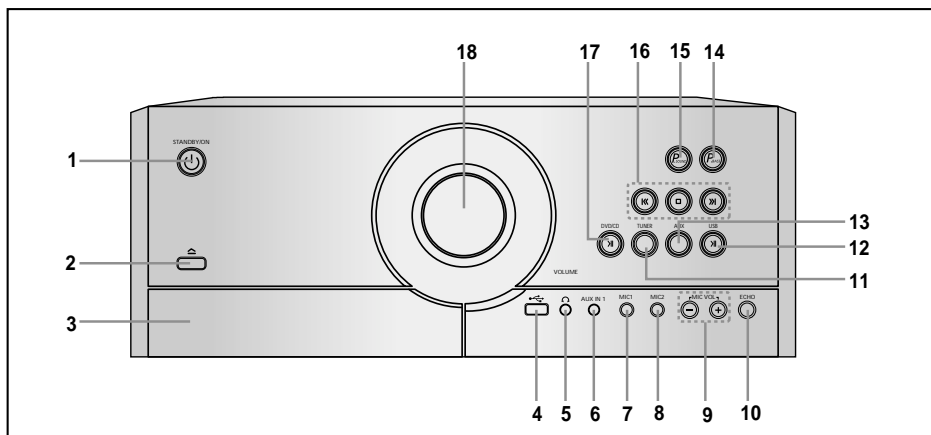


1. STANDBY/ON BUTTON
2. OPEN/CLOSE BUTTON
3. COMPACT DISC COMPARTMENT
4. USB JACK
5. HEADPHONE JACK
6. AUX IN 1
7. MIC 1
8. MIC 2
9. MIC VOLUME BUTTON
10. ECHO BUTTON
11. TUNER FUNCTION
12. USB FUNCTION
13. AUX FUNCTION
14. POWER BASS BUTTON
15. POWER SOUND BUTTON
16. SEARCH FUNCTION BUTTONS, TUNING MODE OR STOP BUTTON
17. DVD/CD FUNCTION
18. VOLUME CONTROL

—Rear Panel—

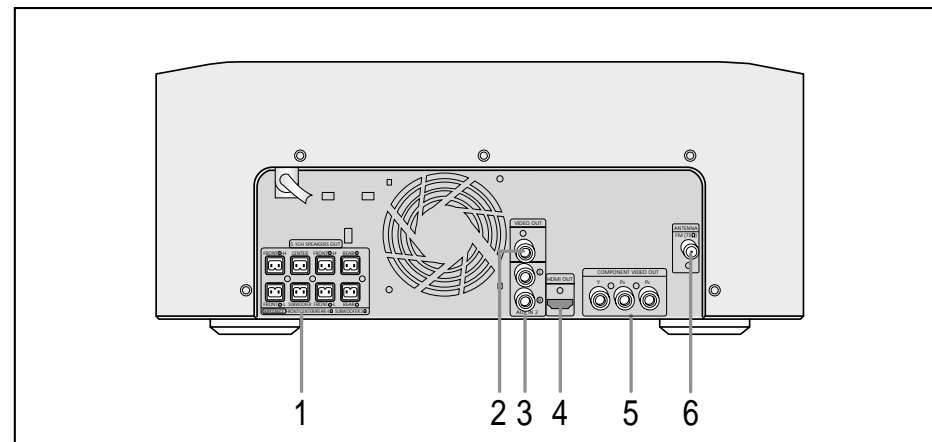

1. **5.1 Channel Speaker Output Terminals**
2. **Video Output Connector**
Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
3. **AUX IN 2 Connector**
4. **HDMI OUT Connector**
5. **Component Video Output Connectors**
Connect a TV with component vide input jacks to these jacks.
6. **FM Antenna Connector**

Accessories

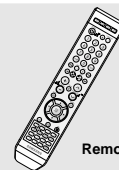

Remote Control



Video Cable



HDMI Cable(option)



FM Antenna




User's Manual






Description

—Remote Control—

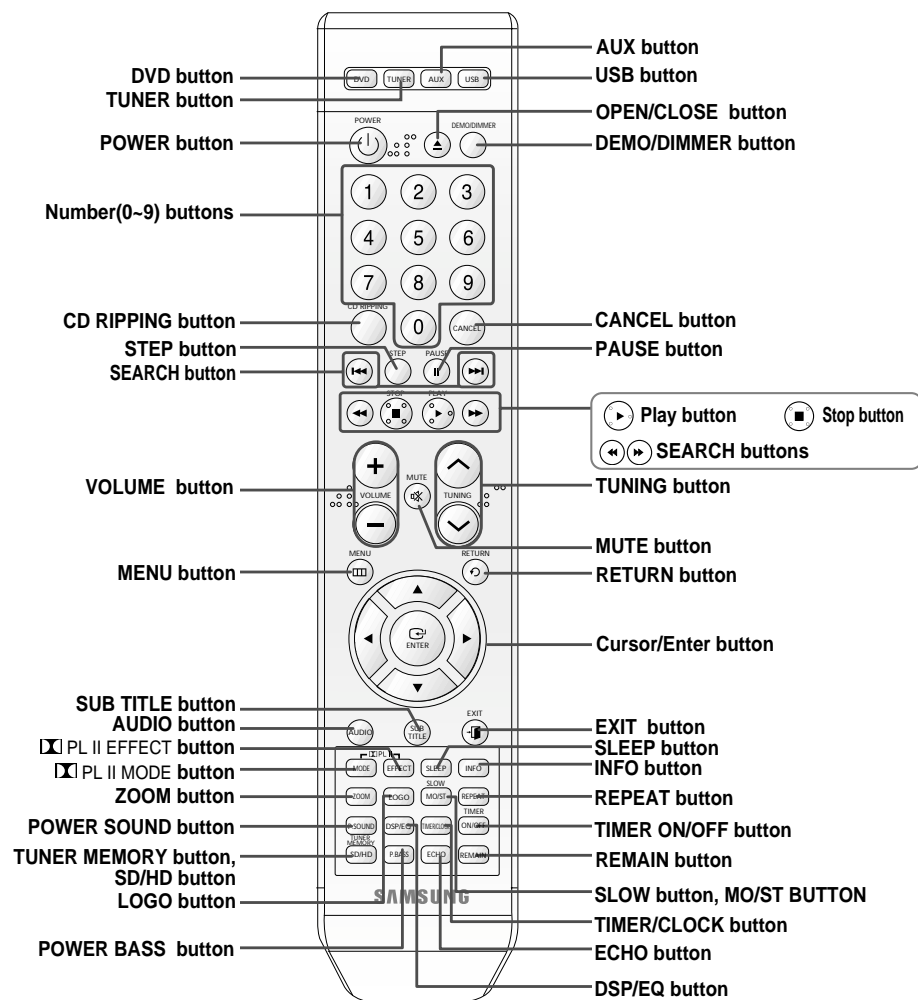

Insert Remote Batteries

- 1 Remove the battery cover in the direction of the arrow.
- 2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).
- 3 Replace the battery cover.

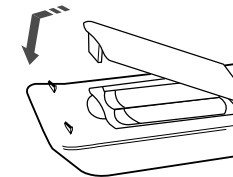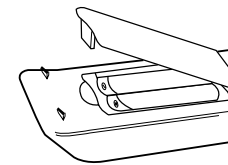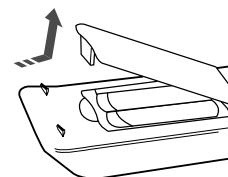


Caution

Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

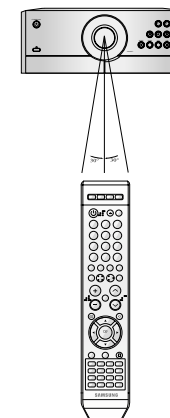




Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

ENG

CONNECTIONS

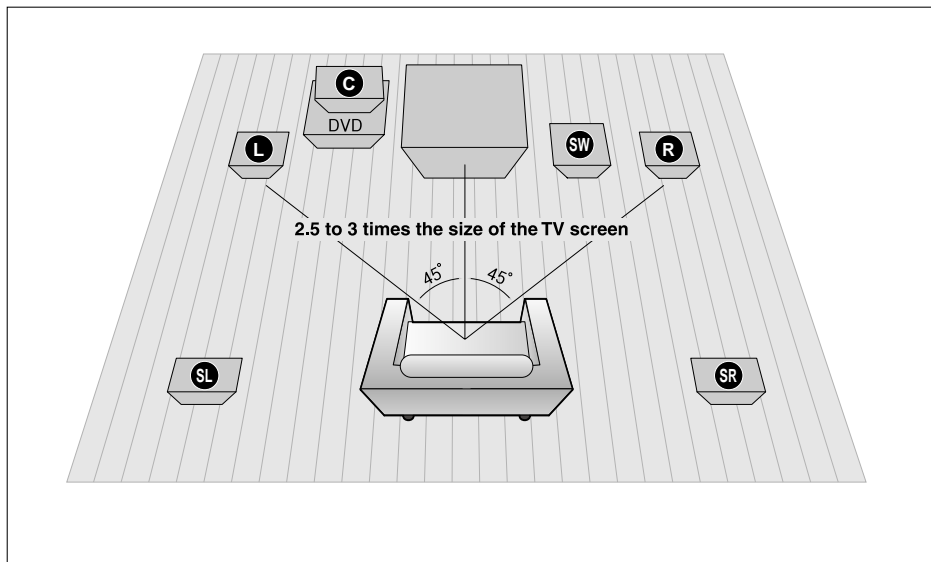

Position of the DVD Player

- Place it on a stand or cabinet shelf, or under the TV stand.

Front Speakers **L R**

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

Center Speaker **C**

- It is best to install it at the same height as the front speakers.
- You can also install it directly over the main unit, and you should better install them directly over or under the TV.

Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TVs 2~2.4m (6~8feet)
For 55" TVs 3.5~4m (11~13feet)

Rear Speakers **SL SR**


- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers so they face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.

* Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

* **Sound will be heard from the rear speakers in DVD 5.1-CH or Dolby Pro Logic II mode only.**

Subwoofer **SW**

- The position of the subwoofer is not so critical. Place it anywhere you like.

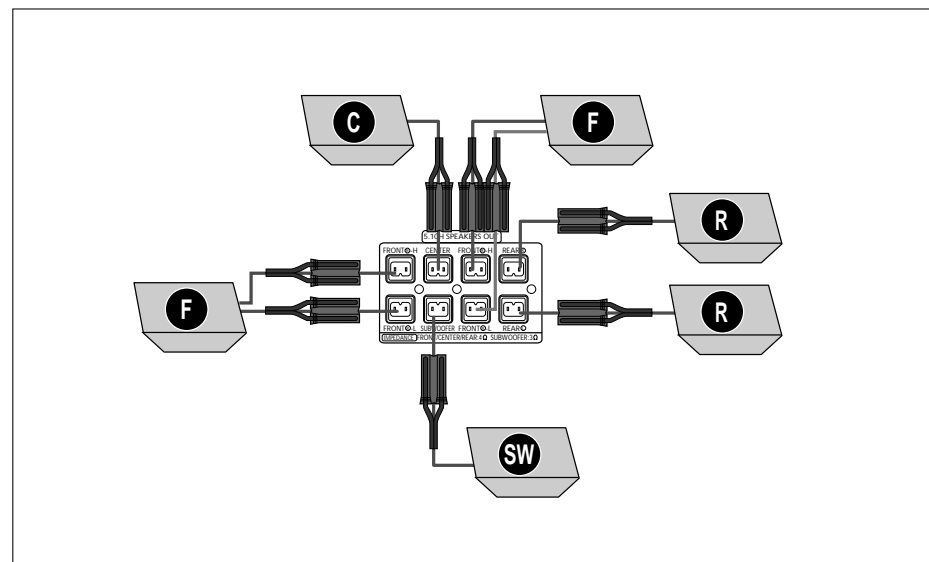


- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- Keep the speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).



- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

Connecting the Video Out to your TV

Choose one of the four methods for connecting to a TV.

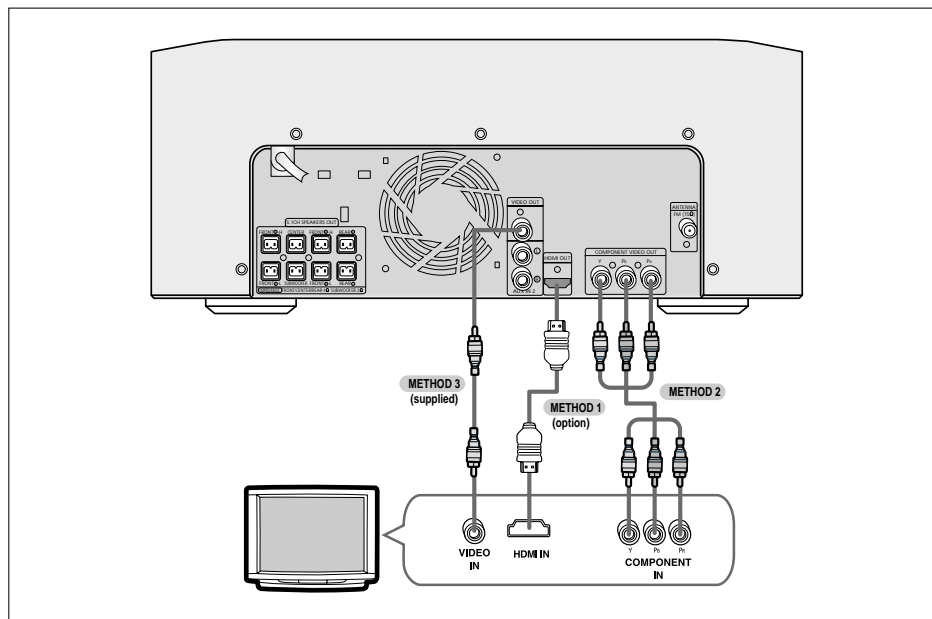

METHOD 1 : HDMI (Best Quality)

Connect the HDMI cable from the HDMI OUT jack on the back of the DVD Player to the HDMI IN jack on your TV.

METHOD 2 : Component Video (Better Quality)

If your television is equipped with Component Video inputs, connect a Component video cable(not supplied) from the Component Video Output (Pr, Pb and Y) jacks on the back of the DVD Player to the Component Video Input jacks on your TV.

METHOD 3 : Composite Video (Good Quality)


Connect the supplied Video cable from the VIDEO OUT jack on the back of the DVD Player to the VIDEO IN jack on your TV.

- This product operates in Interlace scan mode (576i) for component output.

HDMI Function

Resolution Selection

This function allows the user to select the screen resolution for HDMI output.

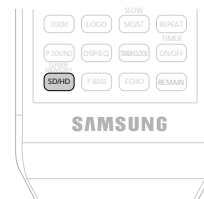

In Stop mode, press and hold the SD/HD (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 480p, 720p, 1080i.
- SD(Standard Definition) resolution is 480p and HD(High Definition) resolution is 720p/1080i.

- If the TV does not support the configured resolution, you will not be able to see the picture properly.
- **When an HDMI cable is connected, composite and component video signals are not output.**
- See your TV owner's manual for more information on how to select the TV's Video Input source.

Why use HDMI (High Definition Multimedia Interface)?

This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.

Setting the HDMI Audio

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.



- 1 In Stop mode, press the **MENU** button.
- 2 Press the Cursor **▼** button to move to **<Audio>** and then press the **ENTER** button.
- 3 Press the Cursor **▼** button to move to **<HDMI AUDIO>** and then press the **ENTER** button.
- 4 Press the Cursor **▲, ▼** button to select **<ON>** or **<OFF>** and then press the **ENTER** button.

- **ON** : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
- **OFF** : Video is transmitted over the HDMI connection cable only, and audio is output through the home theater speakers only.

- The default setting of this function is HDMI AUDIO OFF.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
- ECHO/P.SOUND/EQ/DSP function is not available when HDMI AUDIO is ON.
- MIC output is not available while HDMI AUDIO ON.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.


DVD CD MP3

Disc Playback



1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

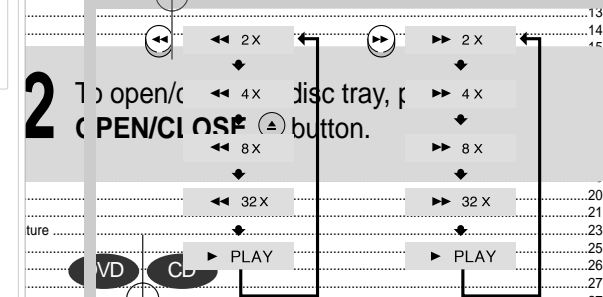


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

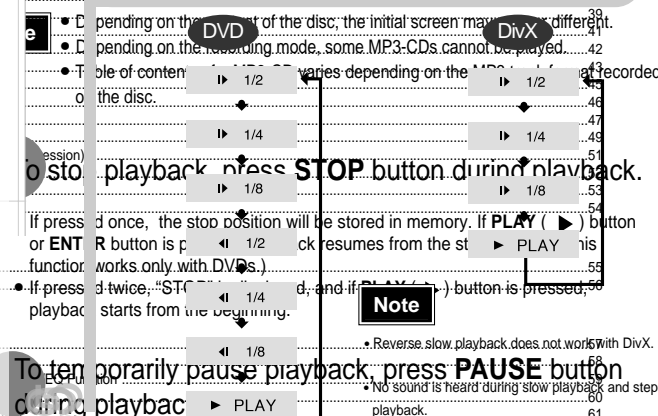

If pressed once, the stop position will be stored in memory. If **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)

- If pressed twice, "STOP" message appears on the screen, and if **STOP** (■) button is pressed, playback starts from the beginning.

Note

- Reverse slow playback does not work with DivX.

- No sound is heard during slow playback and step motion playback.

To temporarily pause playback, press **PAUSE** button during playback.

- To resume playback, press **PLAY** (▶) button again.

Display

1. Press **INFO** button. In stop mode, press **1 MENU** button.

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:




- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

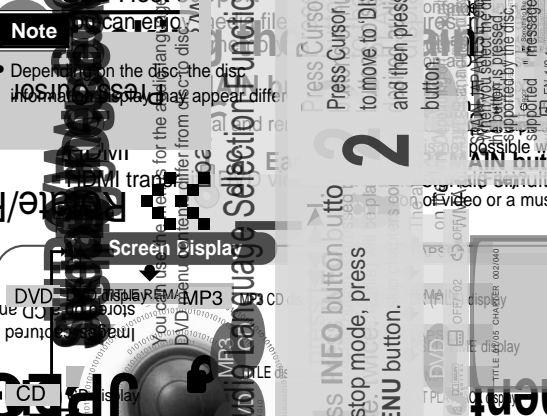

If pressed once, the stop position will be stored in memory. If **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)

- If pressed twice, "STOP" message appears on the screen, and if **STOP** (■) button is pressed, playback starts from the beginning.

Note

- Reverse slow playback does not work with DivX.

- No sound is heard during slow playback and step motion playback.

To temporarily pause playback, press **PAUSE** button during playback.

- To resume playback, press **PLAY** (▶) button again.


DVD CD MP3

Disc Playback



1. Press <<>> button.

- Each time the button is pressed during playback, the playback speed changes as follows:

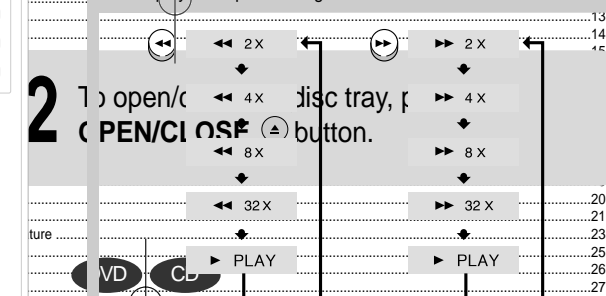


- Playback starts automatically.

2. Press SLOW button.

- Playback starts automatically.

Press SLOW button.

- Each time the button is pressed during playback, the playback speed changes as follows:

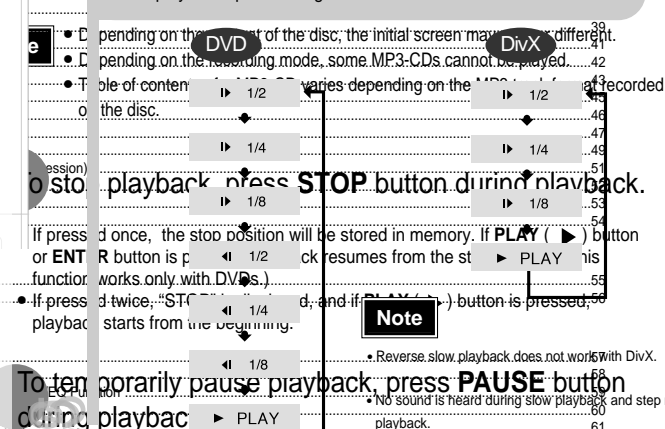

- Depending on the format of the disc, the initial screen may be different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- The time of content varies depending on the disc.

If pressed once, the stop position will be stored in memory. If PLAY (▶) button or ENTER button is pressed, playback resumes from the stop position.

- If pressed twice, "STOP" message appears, and if PAUSE (⏸) button is pressed, playback temporarily pauses. To temporarily pause playback during playback, press PAUSE button.
- To resume playback, press PLAY (▶) button again.


Note

- Reverse slow playback does not work with DivX.
- No sound is heard during slow playback and step motion playback.

Disc Playback

Press INFO button on the remote control.

- Each time the button is pressed, the display changes as follows:

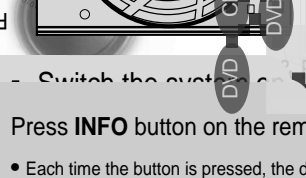

- When the clock is displayed, press the STOP button to stop playback.

The time stop message appears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.

When the time stop message is displayed, press the STOP button to stop playback.

The time stop message disappears.


DVD CD MP3

Disc Playback



1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

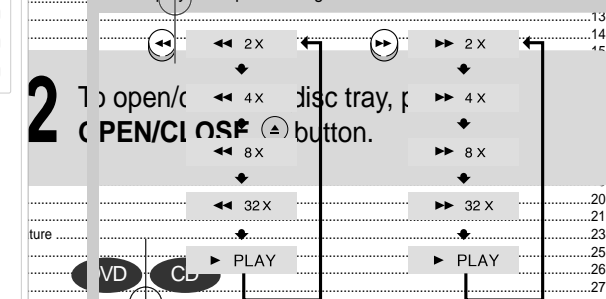


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

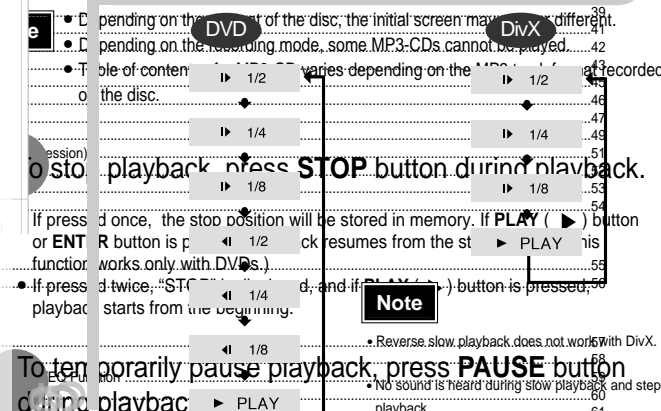

- Depending on the format of the disc, the initial screen may be different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- Playable content varies depending on the MP3-CD.

If pressed once, the stop position will be stored in memory. If **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stop position.

- If pressed twice, "STOP" (■) button is pressed, and if "STOP" (■) button is pressed, playback starts from the beginning.

To temporarily pause playback, press **PAUSE** button during playback.

- Reverse slow playback does not work with DivX.
- No sound is heard during slow playback and step motion playback.

To temporarily pause playback, press **PAUSE** button during playback.

- To resume playback, press **PLAY** (▶) button again.

Display

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:

Press **INFO** button.

In stop mode, press **MENU** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.

Press **ENTER** button.


Press **ENTER** button.

DVD CD MP3

Disc Playback

1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

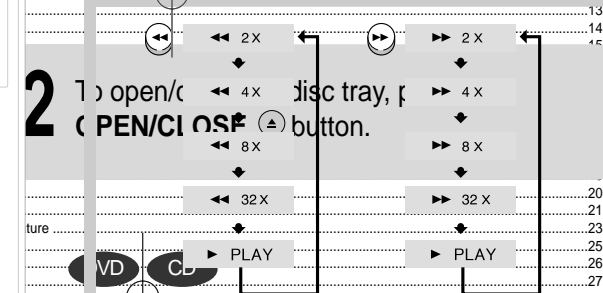


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

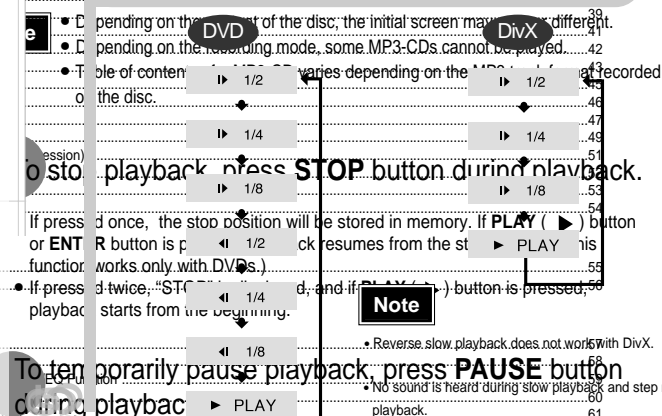

- Depending on the format of the disc, the initial screen may be different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- Table of contents varies depending on the disc.
- If pressed once, the stop position will be stored in memory. If **PLAY** button is pressed, playback resumes from the stop position.
- If pressed twice, "STOP" starts from the beginning.
- Reverse slow playback does not work with DivX.
- No sound is heard during slow playback and step motion playback.
- To temporarily pause playback, press **PAUSE** button during playback.
- To resume playback, press **PLAY** button again.

Display

1. Press **INFO** button. In stop mode, press **MENU** button.

Disc

4. Press **ENTER** button. Press **CURSOR** buttons to select the desired chapter and then press **ENTER** button.

Press **RETURN** button. Each time the button is pressed, the zoom level changes as follows:

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.






Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:

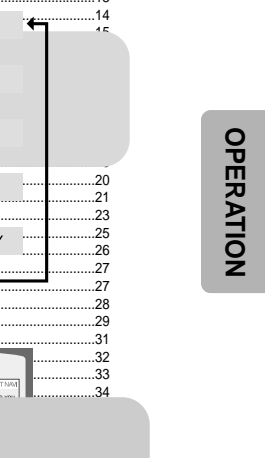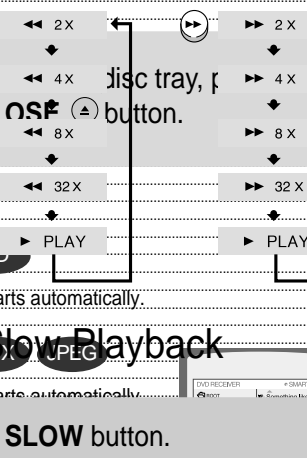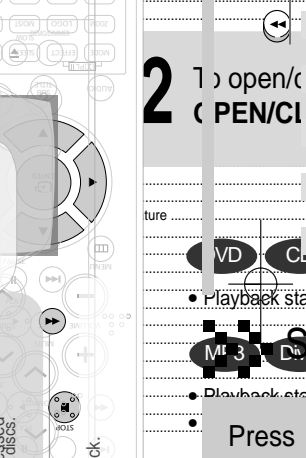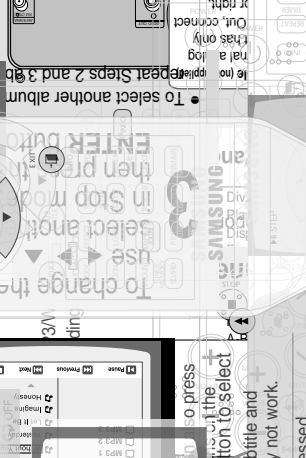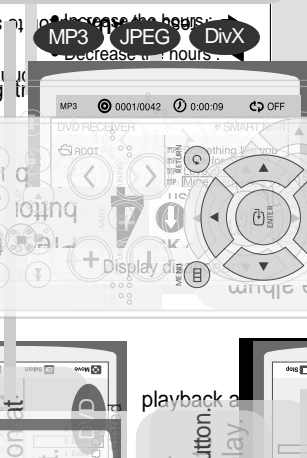


DVD CD MP3

Disc Playback



1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

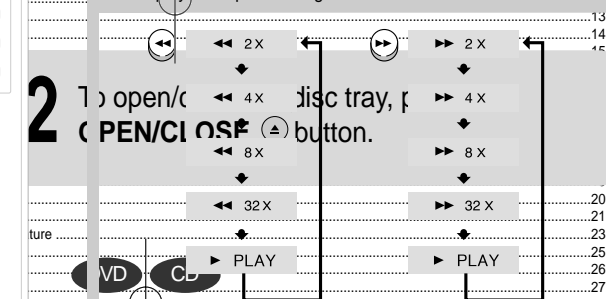


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

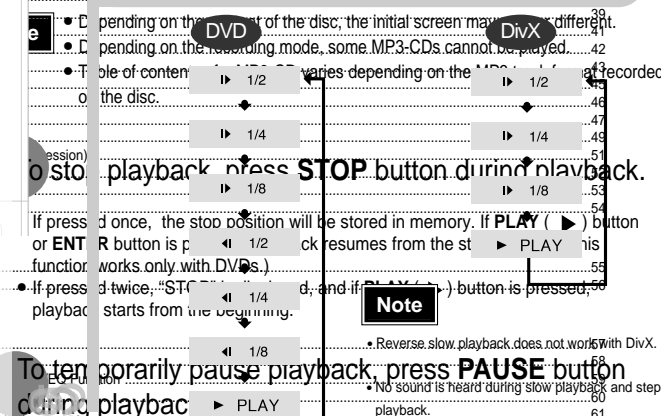

- Depending on the format of the disc, the initial screen may be different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- The time of content varies depending on the disc.
- If pressed once, the stop position will be stored in memory. If **PLAY** button is pressed, playback resumes from the stop position.
- If pressed twice, "STOP" starts from the beginning.
- Reverse slow playback does not work with DivX.
- No sound is heard during slow playback and step motion playback.
- To temporarily pause playback, press **PAUSE** button during playback.
- To resume playback, press **PLAY** button again.

Display

1. Press **INFO** button. In stop mode, press **MENU** button.

Disc

4. Press **ENTER** button. Press **CURSOR** buttons to select the desired chapter and then press **ENTER** button.

Press **RETURN** button. Each time the button is pressed, the zoom level changes as follows:

Press **MENU** button. Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:

DVD 01/01 00:00:37 1/1

When the cover is closed, the display disappears.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

CLOCK is displayed.

Decrease the minutes.

Customized.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.

Decrease the minutes.


DVD CD MP3

Disc Playback



1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

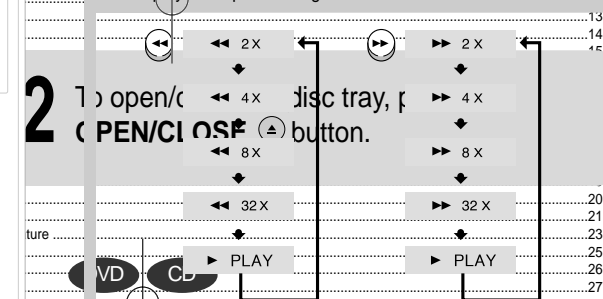


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

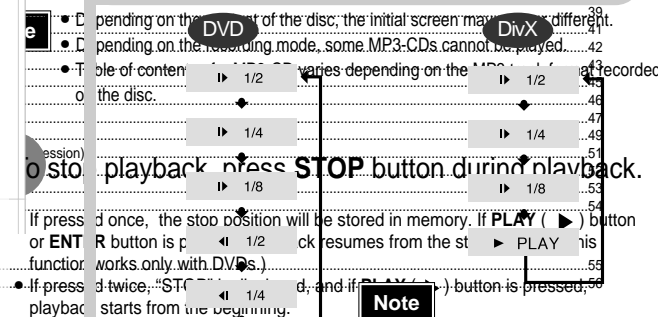

- Depending on the format of the disc, the initial screen may be different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- The time of content varies depending on the disc.
- If pressed once, the stop position will be stored in memory. If **PLAY** button is pressed, playback resumes from the stop position.
- If pressed twice, "STOP" starts from the beginning.
- Reverse slow playback does not work with DivX.
- No sound is heard during slow playback and step motion playback.
- To temporarily pause playback, press **PAUSE** button.
- To resume playback, press **PLAY** button again.

Display

1. Press **INFO** button. In stop mode, press **MENU** button.

Disc

4. Press **ENTER** button. Press **Cursor** buttons to select the desired chapter and then press **ENTER** button.

Press **RETURN** button. Each time the button is pressed, the zoom level changes as follows:

Press **MENU** button. Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **EXIT** button to press the numeric buttons.

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:

4. When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

When the clock is displayed, press **ENTER** button. The minutes are displayed.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.



Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.

Decrease the minutes by pressing the **DOWN** button.


Display



1. Press   button.

- Each time the button is pressed during playback, the playback speed changes as follows:

2 To open/close the disc tray, press the **OPEN/CLOSE** button.

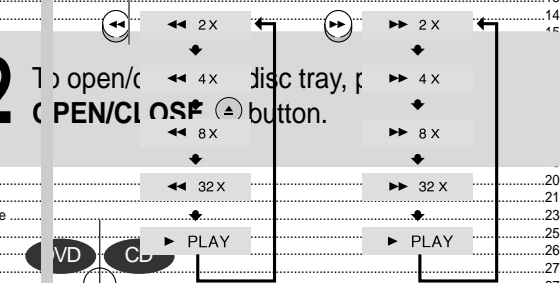

- Playback starts automatically

Slow Playback

- **Daybook starts automatically**

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:


	• Depending on the recording mode of the disc, the initial screen may be different. 39
	• Depending on the recording mode, some MP3-CDs cannot be played. 41
	• Depending on the recording mode, some MP3-CDs cannot be played. 42

Table of contents 1/2 varies depending on the 1/2 at recorder

STOP button during playback

If pressed once, the stop position will be stored in memory. If **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stored position. (This function works only with DVDs.)

● If press d twice, "STC" is displayed, and if **PLAY/PAUSE** button is pressed, 56

- Reverse slow playback does not work with Di

To temporarily pause playback, press **PAUSE** button during playback. ▶ **PLAY**

• To resume playback, press **PLAY/PAUSE** button again.


DVD CD MP3

Disc Playback



1. Press **◀▶▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

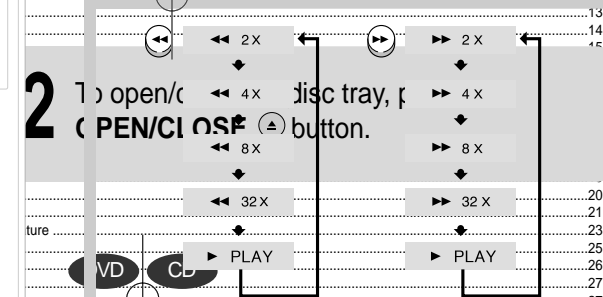


- Playback starts automatically.

Slow Playback

- Playback starts automatically.

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

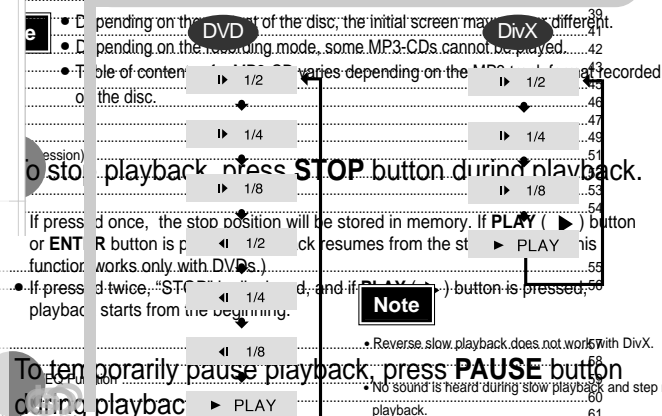


To temporarily pause playback, press **PAUSE** button during playback.

- To resume playback, press **PLAY** button again.

Display

1. Press **INFO** button. In stop mode, press **MENU** button.

Disc

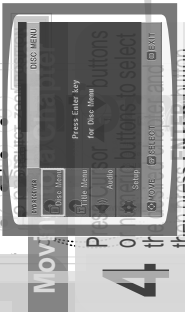

4. Press **ENTER** button.

Press **RETURN** button.

Press **EXIT** button to stop status and see the main part of the menu.

Press **NUMERIC** buttons.

To select the disc, press **ENTER** button.

To play a disc, press **PLAY** button.

To stop playback, press **STOP** button.

To change the disc, press **DISC** button.

To change the disc, press **DISC** button.

To change the disc, press **DISC** button.

To change the disc, press **DISC** button.

To change the disc, press **DISC** button.

To change the disc, press **DISC** button.

Press **INFO** button on the remote control.

- Each time the button is pressed, the display changes as follows:

DVD

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

When the disc is played, the display shows the current time and the remaining time.

Setting the Language

OSD language is set to English by default.

1 In stop mode, Press **MENU** button.




2 Press Cursor \blacktriangledown button to move to 'Setup' and then press **ENTER** button.



3 Press **ENTER** button.



4 Press Cursor $\blacktriangle, \blacktriangledown$ button to select the desired item and then press **ENTER** button.

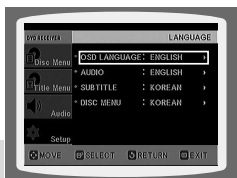

5 Press Cursor $\blacktriangle, \blacktriangledown$ button to select the desired language and then press **ENTER** button.

- Once the setup is complete, if the language was set to English, OSD will be displayed in English.



Note

- To select other language, select OTHER and enter the language code of your country. (See page 38 for language code of countries)

AUDIO, SUB TITLE and DISC MENU language can be selected.



Selecting the
OSD Language



Selecting the
Audio Language
(recorded on the disc)



Selecting the
Subtitle Language
(recorded on the disc)



Selecting the Disc Menu
Language (recorded on the disc)

* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

Press **MENU** or **EXIT** button to exit the setup screen.

Language Code List

Enter the appropriate code number for the initial settings "Disc Audio", "Disc Subtitle" and/or "Disc Menu" (See page 37).

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1181	Frisian	1334	Latvian, Lettish	1506	Slovenian
1028	Abkhazian	1183	Irish	1345	Malagasy	1507	Samoan
1032	Afrikaans	1186	Scots Gaelic	1347	Maori	1508	Shona
1039	Amharic	1194	Galician	1349	Macedonian	1509	Somali
1044	Arabic	1196	Guarani	1350	Malayalam	1511	Albanian
1045	Assamese	1203	Gujarati	1352	Mongolian	1512	Serbian
1051	Aymara	1209	Hausa	1353	Moldavian	1513	Siswati
1052	Azerbaijani	1217	Hindi	1356	Marathi	1514	Sesotho
1053	Bashkir	1226	Croatian	1357	Malay	1515	Sundanese
1057	Byelorussian	1229	Hungarian	1358	Maltese	1516	Swedish
1059	Bulgarian	1233	Armenian	1363	Burmese	1517	Swahili
1060	Bihari	1235	Interlingua	1365	Nauru	1521	Tamil
1069	Bislama	1239	Interlingue	1369	Nepali	1525	Tegulu
1066	Bengali; Bangla	1245	Inupiak	1376	Dutch	1527	Tajik
1067	Tibetan	1248	Indonesian	1379	Norwegian	1528	Thai
1070	Breton	1253	Icelandic	1393	Occitan	1529	Tigrinya
1079	Catalan	1254	Italian	1403	(Afan) Oromo	1531	Turkmen
1093	Corsican	1257	Hebrew	1408	Oriya	1532	Tagalog
1097	Czech	1261	Japanese	1417	Punjabi	1534	Setswana
1103	Welsh	1269	Yiddish	1428	Polish	1535	Tonga
1105	Danish	1283	Javanese	1435	Pashto, Pushto	1538	Turkish
1109	German	1287	Georgian	1436	Portuguese	1539	Tsonga
1130	Bhutani	1297	Kazakh	1463	Quechua	1540	Tatar
1142	Greek	1298	Greenlandic	1481	Rhaeto-Romance	1543	Twi
1144	English	1299	Cambodian	1482	Kirundi	1557	Ukrainian
1145	Esperanto	1300	Kannada	1483	Romanian	1564	Urdu
1149	Spanish	1301	Korean	1489	Russian	1572	Uzbek
1150	Estonian	1305	Kashmiri	1491	Kinyarwanda	1581	Vietnamese
1151	Basque	1307	Kurdish	1495	Sanskrit	1587	Volapuk
1157	Persian	1311	Kirghiz	1498	Sindhi	1613	Wolof
1165	Finnish	1313	Latin	1501	Sangro	1632	Xhosa
1166	Fiji	1326	Lingala	1502	Serbo-Croatian	1665	Yoruba
1171	Faeroese	1327	Laothian	1503	Singhalese	1684	Chinese
1174	French	1332	Lithuanian	1505	Slovak	1697	Zulu

Setting the Wallpaper

1 During playback, press the **PAUSE** button when an image you like appears.

When adjusting the audio quality using the setup screen

2 Press **LOGO** button.

2 Press **Cursor** button to move to 'Audio' and then press **ENTER** button to select the item.

1 In Stop mode, press **MENU** button.

2 Press **Cursor** button to move to 'Setup' and then press **ENTER** button.

Select this to set the Samsung Logo image as your wallpaper.

Select this to set the desired image as your wallpaper.



Setting the Wallpaper

To Change the Wallpaper

4

Press the **ENTER** button and the selected wallpaper will be displayed.

Note

Adjusting Front/Rear Speaker Balance

- You can select between 00 and +06 and OFF.
- The volume decreases as you move closer to 0.

Adjusting Center/Rearsubwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

5

Press **EXIT** button to exit the setup screen.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.



Cautious Setting

Use this to restrict playback of adult or violent DVDs you do not want your child to see.

42

Setting the Wallpaper

1 During playback, press the **PAUSE** button when an image you like appears.




2 Press **LOGO** button.




1 In Stop mode, press **MENU** button.

2 Press **ENTER** button to move to 'Setup' and then press **ENTER** button.

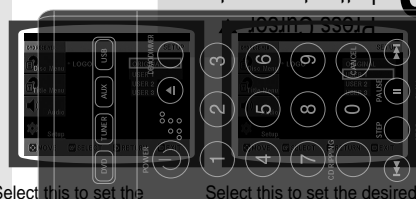

Select this to set the Samsung Logo image as your wallpaper.


Select this to set the desired image as your wallpaper.

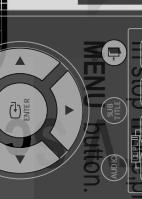

Setting the Wallpaper

To Change the Wallpaper

4 Press the **ENTER** button and then press **ENTER** button.

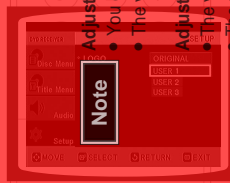

Adjusting Front/Rear Speaker Balance

- You can select between 00 and +06 and OFF.
- The volume decreases as you move closer to 0.

Adjusting Center/Rearsubwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

5 Press **EXIT** button to exit the setup screen.



Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.



Setting the Speaker Mode

Signal outputs and frequency responses from the speakers will automatically be adjusted according to your speaker configuration and whether certain speakers are used or not.

1 In Stop mode, press **MENU** button.



2 Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.



3 In the Speaker Setup, press the **ENTER** button again.



4 Press Cursor ▲, ▼, ◀, ▶ buttons to move to the desired speaker and then press **ENTER** button.


- For C, SL, and SR, each time the button is pressed, the mode switches alternately as follows: SMALL → NONE.
- For L and R, the mode is set to SMALL.



SMALL : Select this when using the speakers.
NONE : Select this when no speakers are installed.

Note

- Although Center CH can toggle between SMALL and NONE, it is not relevant to speaker settings because signals are distributed to FRONT L-CH and R-CH by creating a virtual Center CH. (Default setting is SMALL).
- SPEAKER SETUP --- Available only in DVD.

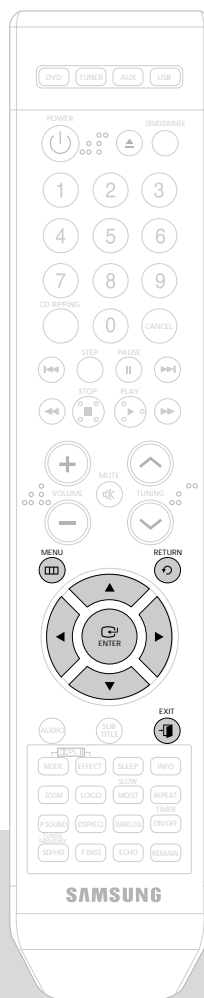

Setting the Test Tone


ENG

Press the Test Tone to check the speaker connections and to adjust the speaker levels.

1 In Stop mode, press **MENU** button.



2 Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

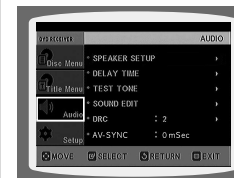

3 Press Cursor ▼ button to move to 'TEST TONE' and then press **ENTER** button.

- The test tone will be sent to L → C → R → SR → SL → SW in that order. If the **ENTER** button is pressed again at this time, the test tone will stop.



Note

- The test tone function is not available while HDMI AUDIO ON.

Press **RETURN** button to return to the previous level.


Press **MENU** button to exit the setup screen.

Press **EXIT** button to exit the setup screen.

SETUP

Setting the Delay Time

If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the rear speakers.

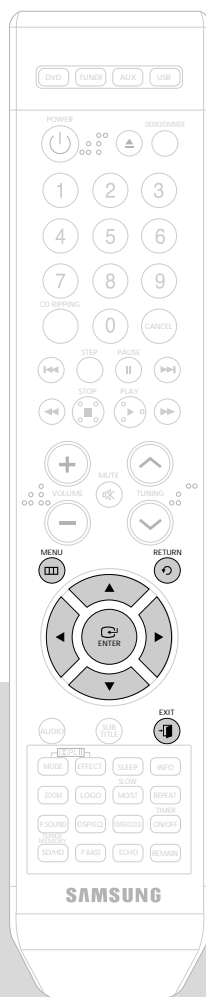


- 1** In Stop mode, press **MENU** button.



- 2** Press Cursor \blacktriangledown button to move to 'Audio' and then press **ENTER** button.



- 3** Press Cursor \blacktriangledown button to move to 'DELAY TIME' and then press **ENTER** button.

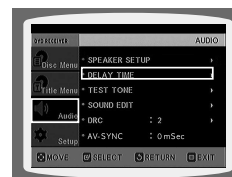

- 4** Press Cursor $\blacktriangle, \blacktriangledown, \blacktriangleleft, \blacktriangleright$ buttons to move to the desired speaker and then press **ENTER** button.



- 5** Press Cursor $\blacktriangleleft, \blacktriangleright$ to set the Delay time.

- You can set the delay time for C between 00 and 05mSEC and for LS and RS between 00 and 15mSEC.



Setting up the Speaker Delay Time

When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. Since the sounds arrive at the listening position at different times depending on the placement of speakers, you can adjust this difference by adding a delay effect to the sound of the Center Speaker and Surround Speakers.

Note

- With \square PLII (Dolby Pro Logic II), the delay time may be different for each mode.
- With AC-3 and DTS, the delay time can be set between 00 and 15mSEC.

Setting CENTER SPEAKER


If the distance of Dc is equal to or longer than the distance of Df in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

Distance between Df and Dc	Delay Time
0.00 m	0 ms
0.34 m	1 ms
0.68 m	2 ms
1.02 m	3 ms
1.36 m	4 ms
1.70 m	5 ms

Setting REAR () SPEAKERS

If the distance of Df is equal to the distance of Ds in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

Distance between Df and Ds	Delay Time
0.00 m	0 ms
1.02 m	3 ms
2.04 m	6 ms
3.06 m	9 ms
4.08 m	12 ms
5.10 m	15 ms

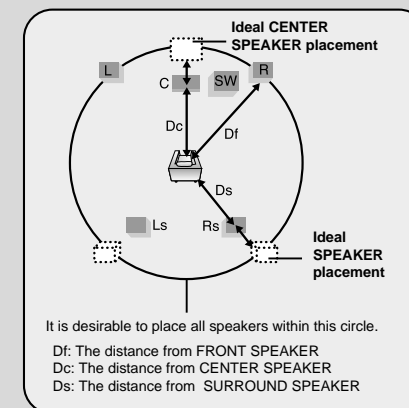



Dolby Pro Logic II Mode

You can select the desired Dolby Pro Logic II audio mode.



1 Press the **PL II MODE** button.

Each time the button is pressed, the mode changes as follows.

MUSIC → CINEMA → PRO LOGIC → MATRIX
→ STEREO

PRO LOGIC II


- **MUSIC**: When listening to music, you can experience sound effects as if you are listening to the actual performance.
- **CINEMA**: Adds realism to the movie soundtrack.
- **PRO LOGIC**: You will experience a realistic multi-channel effect, as if using five speakers, while using just the front left and right speakers.
- **MATRIX**: You will hear 5.1 channel surround sound.
- **STEREO**: Select this to listen to sound from the front left and right speakers and the subwoofer only.

- When selecting Pro Logic II mode, connect your external device to the **AUDIO INPUT** jacks (L and R) on the player. If you connect to only one of the inputs (L or R), you cannot listen to surround sound.



Dolby Pro Logic II Effect

This function works only in Dolby Pro Logic MUSIC mode.

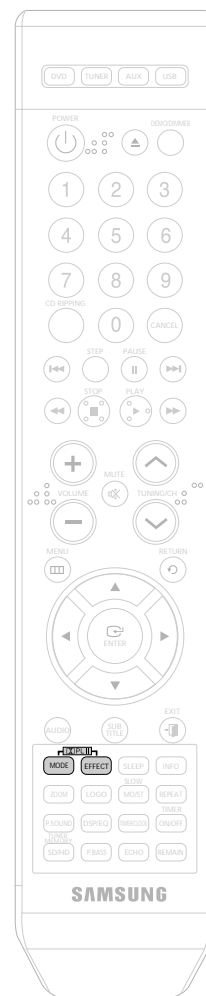

- 1 Press the **PL II MODE** button to select **<MUSIC>** mode.
- 2 Press the **PL II EFFECT** button to select **<PANORAMA>**, then press the Cursor **◀, ▶** buttons to select the desired effect setting.
 - You can select either 0 or 1.
 - This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.
- 3 Press the **PL II EFFECT** button to select **<C-WIDTH>**, then press the Cursor **◀, ▶** button to select the desired effect setting.
 - You can select between 0 and 7.
 - This sets the width of the center image. The higher the setting, the less sound comes from the center speaker.
- 4 Press the **PL II EFFECT** button to select **<DIMENSION>**, then press the Cursor **◀, ▶** button to select the desired setting.
 - You can select between 0 and 6.
 - Incrementally adjusts the sound field (DSP) from the front or rear.


- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and the **PL II** (Dolby Pro Logic II) button does not work.

Setting the Password

the password for the Parental (rating level) setting.

Press Cursor ▼ button to move to 'PASSWORD' and then press ENTER button.

Example : Presetting FM 89.10 in the memory

- 1 Press the TUNER button to select the FM
- 2 Press the  button to move to 'Setup' and then press ENTER button.

3 Press the **TUNER MEMORY** button.

4 Press the **◀◀▶▶** button to select preset number.

You can select between 1 and 15 presets.

5 Press the **TUNER MEMORY** button again.

6 To preset another station, repeat steps 2 to 5.

5. Enter the password and then press **ENTER** button.

- Enter the old password, a new password, and confirm new password.
- The setting is complete.

- This unit does not receive AM broadcasts.

Note

button to return to the previous level.

Press CANCEL button to cancel the error numeric when you inputting password.

Press **EXIT** button to exit the setup screen.

Press **POWER** to set the system to standby mode.

Press **ENTER** to
confirm the timer.
Loud alarm volume may damage your hearing.

Note ▶ button

2

Press Cursor ▼

into the Mic 1 or 2 terminal. The source to be selected is

to the **PHONES** jack on the front panel.

5 Set the timer switch-off time.

Set the timer

press

Remote Control

- 1 Press the **TUNER** button to select the FM band.
- 2 Tune in to the desired station.

- **Automatic Tuning 1 :** When the power is turned on, the radio automatically searches for a station and begins broadcasting.
- **Automatic Tuning 2 :** Press the **ENTER** button to automatically search for a station and begin broadcasting.
- **Manual Tuning :** Briefly press the **ENTER** button to increase or decrease the frequency.

Main Unit

- 1 Press the **FUNCTION** button.
- 2 Select a broadcast station.

[illegible]

GameFusion

- Press the MFG button
- Time the use of the close button
- Each time the button is pressed, you will be notified
- In a non-reception area, you will be notified

GameFusion enables you to play the game without a phone with a GameFusion account.

Before using the timer, click on the timer icon.

- For each step, you have a 30-second timer.
- If you exceed this time, you will be notified.

Example: **1**

Press **EXIT** button to exit the setup screen.

POWER SOUND / POWER BASS / DSP/EQ Function



Your mini-compact system is equipped with the function of Power Sound. The function of Power Sound amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

Press the **P.SOUND** button

Result: "P.SOUND" is displayed and "P.SOUND" is displayed for a few seconds. To cancel this function, press **P.SOUND** again, "PASS" is displayed for a few seconds, and P.SOUND disappears.

➤ When CD Ripping, the P.SOUND function can't work and the P.SOUND automatically convert to "OFF" mode.

Your mini-compact system has a bass amplification function called SBS (Super Bass Sound). This function makes the sound more powerful and real.

Press the **P.BASS** button.

Result: BASS is displayed and "P. BASS" is displayed for a few seconds. To cancel this function, press **P.BASS** again, "OFF" is displayed for a few seconds.


➤ When CD Ripping, the P.BASS function can't work and the P.BASS automatically convert to "OFF" mode.

Press **DSP/EQ** on the remote control until the required option is selected.

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

To obtain a...	Select...
Normal balance (linear)	PASS
Balance suitable for pop music	POP
Balance suitable for jazz music	JAZZ
Balance suitable for rock music	ROCK
Balance suitable for studio	STUDIO
Balance suitable for club	CLUB
Balance suitable for hall	HALL
Balance suitable for movie	MOVIE
Balance suitable for church	CHUR CH

➤ When CD Ripping, the DSP/EQ function can't work and the DSP/EQ automatically convert to "PASS" mode.

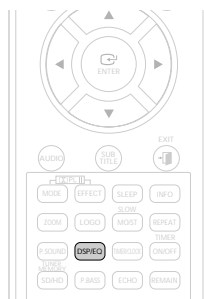

CD RIPPING Function

You can rip a compact disc as a MP3 file on the USB
This feature enables you to ripping with the start of the disc or track of your choice.

1 Switch the system on by pressing **STANDBY/ON**.

2 Connect the USB.

3 Load a compact disc(Digital Audio).

- ◆ Press the **OPEN/CLOSE** button () to open the disc tray.
- ◆ Insert a CD and press the **OPEN/CLOSE** button () to close the disc tray.
- ◆ Use the CD selection () buttons to select the desired song.

4 Press **CD RIPPING** button on remote control to starting ripping.

- ◆ If the system is either at pause or playing state, turn the CD RIPPING dial down or press CD RIPPING button on the remote control to start the ripping for the current track.
- ◆ Turn CD RIPPING dial up or press and hold CD RIPPING button on the remote control to start ripping the all tracks of Disc.
- ◆ "CD Ripping" is displayed in red and CD RIPPING starts.
- ◆ During CD ripping, do not disconnect USB device.

5 To stop ripping, press **STOP** button and then automatically create and save as the MP3 file.

After CD-Ripping, a directory named "RIPPING" will be created in your device. The filename follows the format: "SAM_XXXX".MP3.

Note

- ◆ Don't disconnected USB and AC Cord during CD-Ripping. This may cause the file damage. If you want to stop CD-Ripping during CD-Ripping, you must press stop key first and after the CD Stopped, then you can remove the USB device.
- ◆ If you disconnected USB device when CD Ripping, the main unit will be power off and you may not delete the ripped file. In this case, please connect the USB on the PC and backup the USB data on the PC first and then format the USB device.
- ◆ On the CD playing, connect the USB, the CD play will be paused and will resume playing till the USB initialization finished.
- ◆ According to the different USB, the initialization time may be different.
- ◆ When the USB memory is not enough, it will be displayed "NOT ENOUGH MEMORY".
- ◆ DTS-CD can't for CD Ripping.
- ◆ Starting CD ripping within 5 seconds can't create the CD Ripping file.
- ◆ Ripping file is only created when CD Ripping is stopped after 5 seconds (ex. SAM_0001.MP3).
- ◆ With external HDD, FAT format the USB can be CD Ripping, but not NTFS. The CD Ripping function of this product does not support all USB devices.
- ◆ When you use CD high speed search function, the CD Ripping can't work.
- ◆ When CD Ripping, CD audio can't be out.
- ◆ During CD Ripping, do not deal impact. If it is shocked while CD Ripping, CD Ripping may be disengage.
- ◆ Sometimes, some of USB devices, CD Ripping time is long.
- ◆ If you use scratched disc for CD Ripping, or connect/disconnect HDMI cable during CD Ripping, there might be some noise and broken sound on ripped file.
- ◆ When HDMI audio on, the CD RIPPING can't work.



CD Ripping Feature Supported Player

Product	Company	Type
YP-T8	Samsung	MP3 Player
YP-T7F	Samsung	MP3 Player
YP-D1	Samsung	MP3 Player
YP-T8N	Samsung	MP3 Player
YP-U2	Samsung	MP3 Player
YP-T9	Samsung	MP3 Player
YP-K5	Samsung	MP3 Player
YP-K3	Samsung	MP3 Player
YP-150	Samsung	MP3 Player
YP-U3	Samsung	MP3 Player

Sleep Timer Function / Mute Function

Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.

- Each time the button is pressed, the selection changes as follows: **90 MIN → 60 MIN → 45 MIN → 30 MIN → 15 MIN → OFF**.



To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the DVD player will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until **OFF** appears on the display.

Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- 'MUTE' appears in the display.
- To turn off mute, press the button again.



DEMO Function / DIMMER Function

DEMO Function

You can view the various functions available on your system.

Press **DEMO/DIMMER** button.

- The various functions available are listed in turn on the display.
- All these functions are described in detail in this booklet. For instructions on how to use them, refer to the appropriate sections.

DIMMER Function

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.


Press **DEMO/DIMMER** button.

- Each time the button is pressed, the brightness changes as follows: **DIMMER ON(Dim) → DIMMER OFF(Bright)**.

To cancel this function, press **DEMO/DIMMER** again.

Note

Press any buttons to cancel DEMO function. When you turn off the main unit, DEMO function will be auto start after 10 seconds. If you want to cancel this DEMO function, press DEMO/DIMMER button again.

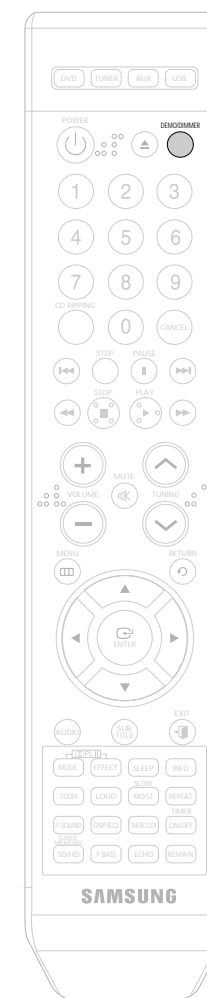

Carried Selling

Use this to restrict playback of adult or violent DVDs you do not want your child to see.

- 1 Press the TUNER button to select the FM band.
- 2 Tune in to the desired station.

- Automatic Tuning 1 : When the power is turned on, the receiver automatically searches for a broadcast station.
- Automatic Tuning 2 : Press the **ENTER** button to automatically search for a broadcast station.
- Manual Tuning : Briefly press the **ENTER** button to increase or decrease the frequency.

 
- 1 Press the **FUNCTION** button.
- 2 Select a broadcast station.

- Automatic Tuning: Press the **STOP** button, then press the **[[K/]]** button to select the preset station.
- Automatic Tuning: Press the **STOP** button to select the **UHF** band, and then press the **[[K/]]** button to automatically search the band.
- Manual Tuning: Press the **STOP** button, then press the **[[K/]]** button to enter the manual tuning mode.
- Press the **[[K/]]** button to enter the manual tuning mode.
- Each time you press the **[[K/]]** button, the tuner will search for a new station.
- The **[[K/]]** button is used to set the timer.

Example: **1**

Press **EXIT** button to exit the setup screen.

Press Cursor ▼
but
'PA
pre

A close-up of a device's control panel showing two buttons labeled 'DVD' and 'TUNER' in white text on a dark background. The 'DVD' button is on the left and the 'TUNER' button is on the right, both enclosed in rounded rectangular frames.

5 Set the timer switch-off time. Plug a microphone with a 3.5ø MIC jack into the Mic 1 or 2 terminal; the selected is

Set the timer



4

Press **POWER** to
set the system to
standby mode.

Press **ENTER** to
confirm the timer.
High volume may damage your
headphones are connected.

Note

Example : Presetting FM 89.10 in the memory

- 1 Press the TUNER button to select the FM
- 2 Press the   button to move to setup' and then press ENTER button.

3 Press the **TUNER MEMORY** button.

4 Press the **◀▶** button to select preset number.

You can select between 1 and 15 presets.

Press the **TUNER MEMORY** button again.

The station is stored in memory.

to preset another station, repeat steps 2 to 5

To tune in to a preset station, press the **ENTER** button.

- Enter the old password, a new password, and confirm new password.
- The setting is complete.


- This unit does not receive AM broadcasts.

Note

tion to return to the previous level.

Press **EXIT** button to exit the setup screen.

42

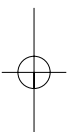

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

[illegible]Symptom

<p>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds after disc is inserted.</p>		<p>Recorded on some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left, from the right, etc.).</p> <p>With such discs, the Angle button can be used to change the angle of view for specific scenes.</p> <p>These numbers are recorded on DVD discs. A Title is subdivided into many sections, each of which is numbered, and specific parts of the video can be searched quickly using these numbers.</p> <p>A high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG-2) and high-density recording technology, a DVD disc comprises two 0.6mm thick discs bonded together.</p> <p>Both the DVD player and DVD discs are encoded with a region number. If the region number on the DVD disc does not correspond to the region number of the DVD player, the player cannot play the disc.</p> <p>Translated appearing at the bottom of the screen. A DVD disc can contain up to 32 subtitle languages.</p>	<p>• Is the power cord plugged securely into the outlet?</p> <p>• Turn off the power and then turn it back on.</p>
<p>Picture is shaking.</p>		<p>Are you using the same disc or disc with scratches on the surface?</p> <p>Are the characters displayed?</p> <p>Is the picture changing or operated with the operation of angle and distance?</p> <p>Are the characters displayed?</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not start immediately when the Play/Pause button is pressed.</p>		<p>No sound seen on the screen.</p> <p>Are the speakers connected properly?</p> <p>Are the speakers set to the correct channel?</p> <p>Is the speaker set to the correct channel?</p>	<p>• Is the TV power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Sound is not produced.</p>		<p>These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as Title 1, Title 2, etc.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>These numbers are assigned to the tracks which are recorded on video and audio CDs. They enable specific tracks to be located quickly.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>The remote control does not work.</p>		<p>Menu screen does not appear even when the Menu function is selected.</p> <p>Aspect ratio cannot be changed.</p> <p>Can't see the radio broadcast.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>5.1 (or 2 Channel Digital Surround sound reproduced from DVDs and LDC recorded as a digital signals with disc marking). With better sound quality, dynamic range, and directional than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds after disc is inserted.</p>		<p>The power level for rating level is too low for gotten.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Sound is not produced.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>The remote control does not work.</p>		<p>Menu screen does not appear even when the Menu function is selected.</p> <p>Aspect ratio cannot be changed.</p> <p>Can't see the radio broadcast.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>5.1 (or 2 Channel Digital Surround sound reproduced from DVDs and LDC recorded as a digital signals with disc marking). With better sound quality, dynamic range, and directional than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds after disc is inserted.</p>		<p>The power level for rating level is too low for gotten.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Sound is not produced.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>The remote control does not work.</p>		<p>Menu screen does not appear even when the Menu function is selected.</p> <p>Aspect ratio cannot be changed.</p> <p>Can't see the radio broadcast.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>5.1 (or 2 Channel Digital Surround sound reproduced from DVDs and LDC recorded as a digital signals with disc marking). With better sound quality, dynamic range, and directional than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds after disc is inserted.</p>		<p>The power level for rating level is too low for gotten.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Sound is not produced.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>• The main unit is not working. (Example: The power strange sound heard.)</p> <p>• The power is not working normally.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>The remote control does not work.</p>		<p>Menu screen does not appear even when the Menu function is selected.</p> <p>Aspect ratio cannot be changed.</p> <p>Can't see the radio broadcast.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Playback does not start immediately when the Play/Pause button is pressed.</p>		<p>5.1 (or 2 Channel Digital Surround sound reproduced from DVDs and LDC recorded as a digital signals with disc marking). With better sound quality, dynamic range, and directional than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.</p>	<p>• Is the power on?</p> <p>• Are the cables connected properly?</p> <p>• Is the picture or damaged?</p> <p>• A poor manufactured disc may not be playable.</p>
<p>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds after disc is inserted.</p>		<p>The power level for rating level is too low for gotten.</p>	



Specifications

GENERAL	Power Consumption	110 W
	Weight	5.1 Kg
	Dimensions (W x H x D)	360 x 150 x 340 mm
	Operating Temperature Range	+5 °C~+35 °C
	Operating Humidity Range	10 % ~ 75 %
FM TUNER	Usable Sensitivity	10 dB
	S/N Ratio	60 dB
	Distortion	0.5 %
VIDEO OUTPUT	Composite Video	1.0 Vp-p(75 Ω load)
	Component Video	Y:1.0 Vp-p(75 Ω load)
		Pr:0.70 Vp-p(75 Ω load)
		Pb:0.70 Vp-p(75 Ω load)
	HDMI	Impedance: 85~115 Ω
AMPLIFIER	Front speaker output	260 W x 2(4 Ω)
	Center speaker output	130 W(4 Ω)
	Rear speaker output	130 W x 2(4 Ω)
	Subwoofer speaker output	160 W(3 Ω)
	Frequency range	20 Hz~20 KHz
	S/N Ratio	70 dB
	Channel separation	50 dB
	Input sensitivity	(AUX)500 mV

SPEAKER	Speaker system	5.1ch speaker system		
		Front speaker	Center/Rear speaker	Subwoofer speaker
	Impedance	4 Ω	4 Ω	3 Ω
	Frequency range	140 Hz~20 kHz	140 Hz~20 kHz	35 Hz~160 Hz
	Output sound pressure level	88 dB	88 dB	90 dB
	Rated input	260 W	130 W	160 W
	Maximum input	520 W	260 W	320 W
	Dimensions (W x H x D)	Front/Rear	220 x 355 x 286 mm	270 x 400 x 286 mm
		Center	360 x 95.5 x 330 mm	
	Weights	Front/Rear	Front: 4.2 Kg, Rear: 3.9 Kg	6.5 Kg
		Center	2.1 Kg	

USB Host Feature Supported Products

ENG

DIGITAL CAMERA

Product	Company	Type	Product	Company	Type
Finepix-A340	Fuji	Digital Camera	U300	Olympus	Digital Camera
Finepix-F810	Fuji	Digital Camera	X-350	Olympus	Digital Camera
Finepix-F610	Fuji	Digital Camera	C-760	Olympus	Digital Camera
Finepix-F450	Fuji	Digital Camera	C-5060	Olympus	Digital Camera
Finepix S7000	Fuji	Digital Camera	X1	Olympus	Digital Camera
Finepix A310	Fuji	Digital Camera	U-mini	Olympus	Digital Camera
KD-310Z	Konica	Digital Camera	Lumix-FZ20	Panasonic	Digital Camera
Finecam SL300R	Kyocera	Digital Camera	DMC-FX7GD	Panasonic	Digital Camera
Finecam SL400R	Kyocera	Digital Camera	Lumix LC33	Panasonic	Digital Camera
Finecam SSR	Kyocera	Digital Camera	LUMIX DMC-F1	Panasonic	Digital Camera
Finecam Xt	Kyocera	Digital Camera	Optio-S40	Pentax	Digital Camera
Dimage-Z1	Minolta	Digital Camera	Optio-S50	Pentax	Digital Camera
Dimage Z1	Minolta	Digital Camera	Optio 33LF	Pentax	Digital Camera
Dimage X21	Minolta	Digital Camera	Optio MX	Pentax	Digital Camera
Coolpix4200	Nikon	Digital Camera	Digimax-420	Samsung	Digital Camera
Coolpix4300	Nikon	Digital Camera	Digimax-400	Samsung	Digital Camera
Coolpix 2200	Nikon	Digital Camera	Sora PDR-T30	Toshiba	Digital Camera
Coolpix 3500	Nikon	Digital Camera	Coolpix 5900	Nikon	Digital Camera
Coolpix 3700	Nikon	Digital Camera	Coolpix S1	Nikon	Digital Camera
Coolpix 4100	Nikon	Digital Camera	Coolpix 7600	Nikon	Digital Camera
Coolpix 5200	Nikon	Digital Camera	DMC-FX7	Panasonic	Digital Camera
Stylus 410 digital	Olympus	Digital Camera	Dimage Xt	Minolta	Digital Camera
300-digital	Olympus	Digital Camera	AZ-1	Olympus	Digital Camera
300-digital	Olympus	Digital Camera			Digital Camera



USB FLASH DISC

Product	Company	Type	Product	Company	Type
Cruzer Micro	Sandisk	USB 2.0 USB Flash Drive 128M	XTICK	LG	USB 2.0 128M
Cruzer Mini	Sandisk	USB 2.0 128M	Micro Mini	lomega	USB 2.0 128M
Cruzer Mini	Sandisk	USB 2.0 256M	iFlash	Imation	USB 2.0 64M
SONY Micro Vault	Sony	USB 2.0 64MB	LG	XTICK(M)	USB 2.0 64M
FLEX DRIVE	Serotech	USB 2.0 32MB	RIDATA	EZDrive	USB 2.0 64M
AnyDrive	A.L tech	USB 2.0 128MB			

MP3 PLAYER

Product	Company	Type	Product	Company	Type
Creative MuVo NX128M	Creative	128 MB MP3 Player	YP-780	Samsung	MP3 Player
Iriver H320	Iriver	20G HDD MP3 Player	YP-35	Samsung	MP3 Player
YH-920	Samsung	20G HDD MP3 Player	YP-55	Samsung	MP3 Player
YP-T7	Samsung	MP3 Player	iAUDIO U2	Cowon	MP3 Player
YP-MT6	Samsung	MP3 Player	iAUDIO G3	Cowon	MP3 Player
YP-T6	Samsung	MP3 Player	iAudio M3	Cowon	HDD MP3 Player
YP-53	Samsung	MP3 Player	SI-M500L	Sharp	256MB MP3 Player
YP-ST5	Samsung	MP3 Player	H10	Iriver	MP3 Player
YP-T5	Samsung	MP3 Player	YP-T5 VB	Samsung	MP3 Player
YP-60	Samsung	MP3 Player	YP-53	Samsung	256MB MP3 Player

MISCELLANEOUS

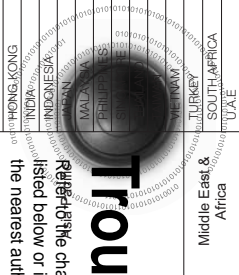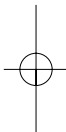

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

T T A L L I D
I B Y T O D I D

Troubleshooting

Symptom		Check/Remedy		Symptom	
I can't eject the disc.		¥Is the power cord plugged securely into the outlet? ¥Turn off the power and then turn it back on.		Audio language and subtitles do not work.	
Playback does not start		¥Check the region number of the DVD. DVD discs purchased from abroad may not be playable. CD-Rs and Video CDs cannot be played on the DVD player. Make sure the recording level is correct.		Menu screen does not appear even when the function is selected.	
The remote control does not work		Is the remote control being operated within its operation range of angle? Are the batteries inserted? Are the batteries exhausted?		Aspect ratio cannot be changed	
Playback does not start immediately when the Play/Pause button is pressed.		Are you missing the Play/Pause button on the disc or disc with scratches on the surface? Wipe the disc.		Can't see radio broadcast	
Sounds not produced.		No so-called "fast playback" motion picture? Are the steps properly? Are the steps properly? Are the steps properly?		¥The main unit is not working. (Example: The power goes out or the power is not working.)	
Picture does not appear, or the disc is not produced, or the disc tray opens 2 to 5 seconds after pressing the Play/Pause button.		Recorded on some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left, from the right, etc.). With such discs, the Angle button can be used to change the angle of view for specific scenes. These numbers are recorded on DVD discs. A title is subdivided into many sections, each of which is numbered, and specific parts of the video can be searched quickly using these numbers. A high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG-2) and high-density recording technology, a DVD disc comprises two 0.6 mm thick discs bonded together. Both the DVD player and DVD discs are encoded with a region number. If the region number on the DVD disc does not correspond to the region number of the DVD player, the player cannot play the disc. Translated appearing at the bottom of the screen. A DVD disc can contain up to 32 subtitle languages.		5.1 (or 5) Channel Digital Surround sound reproduced from DVDs and LDs recorded as digital signals with dynamic range, and directionality than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.	
Discs rotating but no picture is produced.		¥Is the TV power on? ¥Are the cables connected properly? ¥Is the disc or disc damaged? ¥A poor manufactured disc may not be playable.		The picture is not clear. The picture is not clear. The picture is not clear.	
picture is shaking.		¥Is the TV power on? ¥Are the cables connected properly? ¥Is the disc or disc damaged? ¥A poor manufactured disc may not be playable.		The picture is not clear. The picture is not clear. The picture is not clear.	

68

From Disc-Player.com Samsung Manuals